





# AUTOMOTIVE FASTENERS

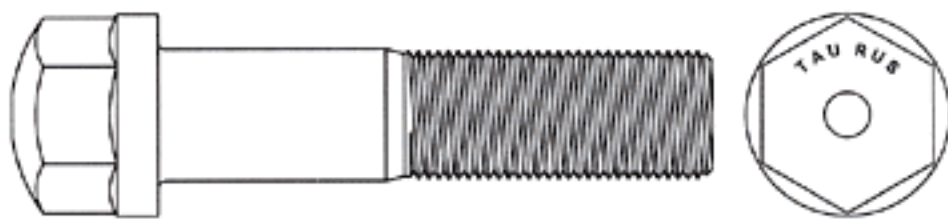


WHEEL BOLTS



TRACK, MASTER LINK (DOME HEAD) BOLT

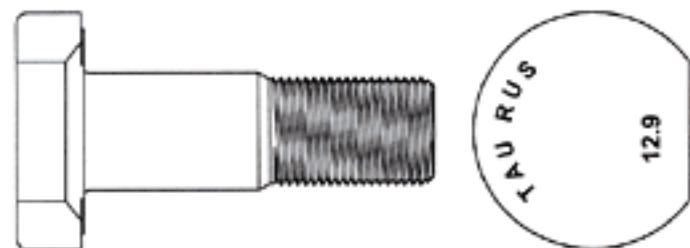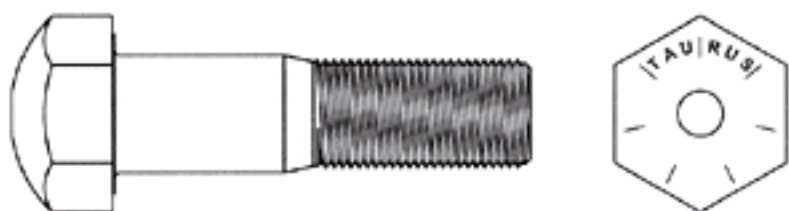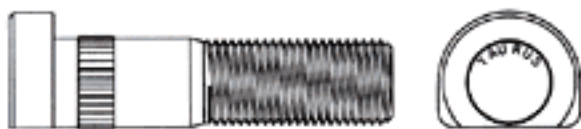


'D' HEAD BOLT

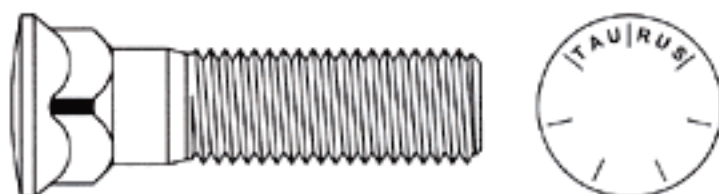

PLOW BOLT (SQUARE NECK)




SQ. HEAD SEGMENT BOLT

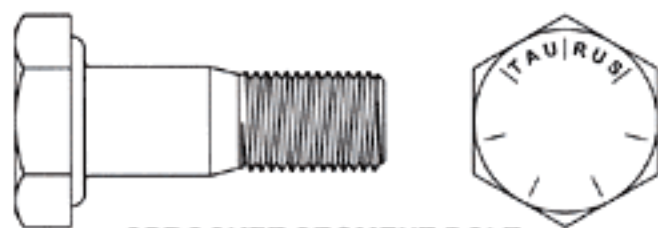


SPROCKET SEGMENT BOLT




TRACK HEX BOLT

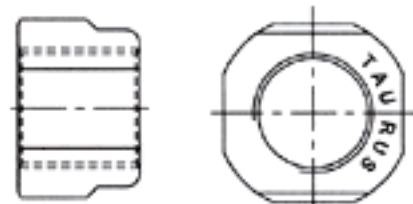


TRACK SHOE NUT

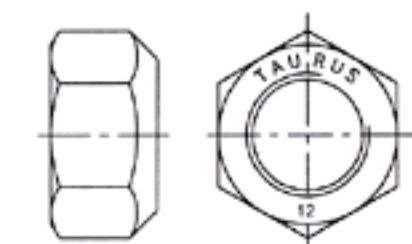


HEX TAPERED NUT

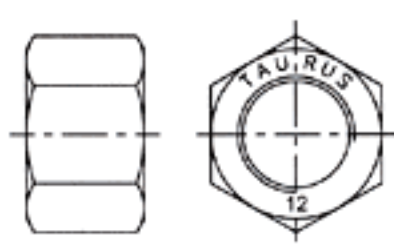


TRACK NUT (HEX)

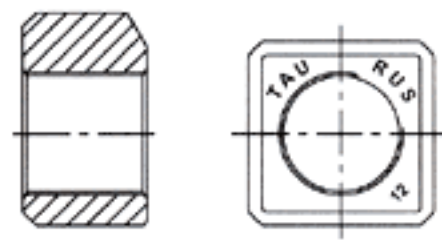

TRACK NUT (SQUARE)

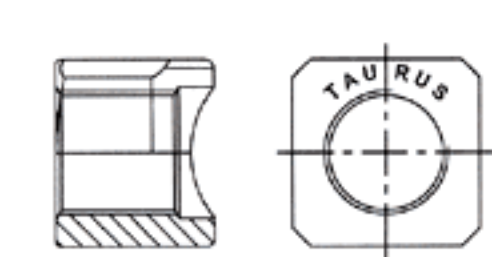

DOME SQUARE NUT

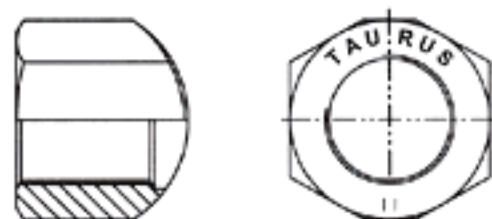

DOME NUT (OCTA)